

ANALYZER SOLUTIONS FOR YOUR PROCESS!

Model 4670 H₂S in Rich Amine Analyzer

THE NEED

Substantial energy savings can be achieved in amine regeneration by controlling amine recirculation to ensure optimum H₂S loading. Continuous measurement of the H₂S in rich amine permits feedback control to the circulator thus ensuring optimum absorber efficiency.


UV photometry is complicated by the ever-changing composition of the aqueous amine solution. Degradation products, corrosion inhibitors, corrosion byproducts, and more, change as the amine is incessantly recycled. A simple and automatic means to compensate for these changes is required.

METHOD OF ANALYSIS

The simplest systems are the most reliable. That's why direct UV absorption measurement is used, without complicated dilution or reagent systems. The Model 4670 monitors the H₂S concentration in the rich amine exiting the contacting column. The amine is filtered to remove any solid contaminants present in the amine. The amine is then passed through a sample cell where the H₂S concentration is measured by the UV photometer. The sample is then returned to a point in the system with a lower pressure to ensure sample flow.

The Model 4670 solves the problem of accurate, continuous analysis by utilizing lean amine as its zeroing fluid. The rich amine sample flow is stopped periodically, and lean amine is directed to the measurement cell. UV absorption is characterized and rich amine flow resumed. Through characterization of the lean amine, all background interferences in the amine solution can be subtracted from the rich amine. The resulting signal is mediated only by H₂S in the rich amine.

The unique AMETEK split-beam, single cell UV analyzer is highly stable and essentially drift-free. This rugged analyzer has no moving parts and a wide tolerance for varying ambient conditions. The system uses a filtration system field-proven to give reliable operation in excess of one year.

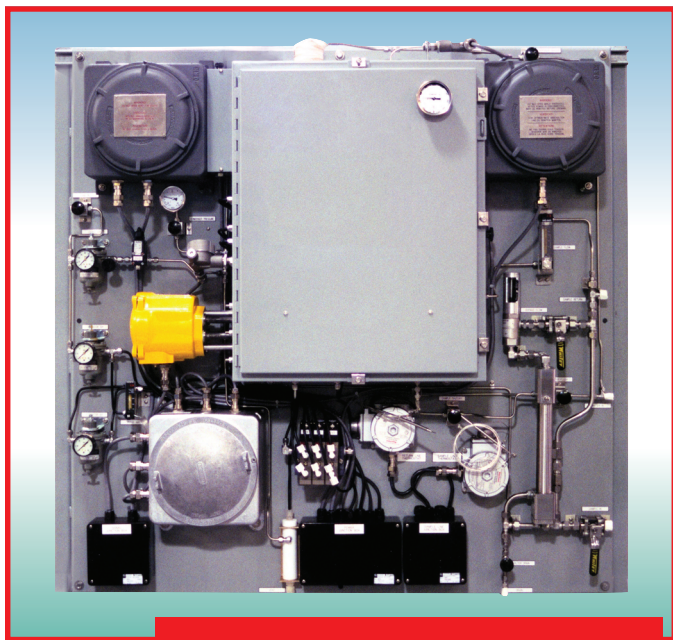

Model 4670 H₂S in Rich Amine Analyzer

FEATURES AND BENEFITS

Lower plant operating costs through:

- Reduced regenerator steam consumption by using a lowered amine circulation rate that ensures operation at the optimum H₂S/amine loading

Lower analyzer maintenance costs through:

- Proven long term reliability
- A system designed for unattended operation

PERFORMANCE SPECIFICATIONS

Range: Typically 0 to 0.5 mol H₂S/mol amine; others available

Repeatability: ±0.5% full scale

Accuracy: ±2% full scale

Outputs

Two (2) 4 to 20mA, linear, isolated, 600-ohm load

One (1) digital, common fail-safe alarm for system fault

One (1) digital input for remote auto-calibration

One (1) RS-485 serial port

Ambient Temperature: -7°C to 50°C (20°F to 120°F)

Hazardous Area: (see note 1)

CENELEC EEx d IIC T3

NEC Class I, Division 1, Groups C & D

Utilities Requirements

0.5 kVA, all worldwide power supplies acceptable

Instrument air at 140 to 700kPa (20 to 100 psig), at 3 ft³/hr (0.1 m³/hr)

Clean water at 70 to 350 kPa (10 to 50 psig) greater than sample return pressure at 60 L/hr

Notes:

1. For the CENELEC configuration, the power supply and controller must be mounted in a safe area.

For additional information contact your local representative.

One of a family of innovative process analyzer solutions from AMETEK Process Instruments. Specifications subject to change without notice.

USA - Pennsylvania
150 Freeport Road
Pittsburgh, PA 15238
Ph. 412-828-9040
Fax 412-826-0399

**MANUFACTURING
LOCATIONS**



CANADA
2876 Sunridge Way N.E.
Calgary, AB T1Y 7H9
Ph. 403-235-8400
Fax 403-248-3550

USA - Delaware
455 Corporate Blvd.
Newark, DE 19702
Ph. 302-456-4400
Fax 302-456-4444

USA - Oklahoma
2001 N. Indianwood Ave.
Broken Arrow, OK 74012
Ph. 918-250-7200
Fax 918-459-0165

AMETEK®
PROCESS INSTRUMENTS
www.ametekpi.com
© 2004, by AMETEK, Inc. All rights reserved.
4670 (12/13/04)

SUPPORT LOCATIONS

USA - Texas
Ph. 281-463-2820
Fax 281-463-2701

CHINA - Beijing
Ph. 86-10-85262111
Fax 86-10-85262141

CHINA - Shanghai
Ph. 86 21 6426 7049
Fax 86 21 6426 7054

FRANCE
Ph. 33 1 30 68 69 20
Fax 33 1 30 68 69 29

GERMANY
Ph. 49 21 59 91 36 0
Fax 49 21 59 91 36 80

MIDDLE EAST - Dubai
Ph. 971-4-881 2052
Fax 971-4-881 2053

SINGAPORE
Ph. 65-6484-2388
Fax 65-6481-6588